

---

# **BH200 Broadcom User Manual**

## **General Description and Name**

BH200 Broadcom. This Scheme implements the skip block method and each Offset XORing with 0x1FC00000 for bad blocks handling.

## **Relevant User Options**

The following special features on the special features tab apply to this scheme. The default values might work in some cases but please make sure to set the right value according to your system.

Please note only the below special feature items are related to this scheme and ignore any others. If any of below items doesn't exist, please check whether the right version has been installed or contact Data I/O for support by submitting Device Support Request through this address:

<http://www.dataio.com/support/dsr.asp>

Bad Block Handling Type = "BH200 Broadcom"

Spare area : Please refer to "Description of common NAND special features.pdf". *Always set as "Enable" for this BBM.* [Default 'Disabled']

PartitionTable File: The path of the partition table file on your PC.

## **Special Notes**

## **Revision History**

V1.0 December 9, 2009  
Create this spec.

## **Appendix**

You can get the file "Description of common NAND special features.pdf" from <http://ftp.dataio.com/FCNotes/BBM/>