
Skip With ReedSolomonECC User Manual

General Description and Name

This scheme Implements the skip block method. Calculate the ECC with ReedSolomonECC 4bit. And put the ECC into the spare areas.

Relevant User Options

The following special features on the special features tab apply to this scheme. The default values might work in some cases but please make sure to set the right value according to your system.

Please note only the below special feature items are related to this scheme and ignore any others. If any of below items doesn't exist, please check whether the right version has been installed or contact Data I/O for support by submitting Device Support Request through this address:

<http://www.dataio.com/support/dsr.asp>

Bad Block Handling Type = "Skip With ReedSolomonECC"

Spare area = "ECC"

Special Notes

- This BBM PC image file should not contain the spare, Tasklink win will calculate the ECC to the spare areas.

Revision History

V1.0 Date: 2011-08-29
Create this spec.

Appendix

You can get the file "Description of common NAND special features.pdf" from <http://ftp.dataio.com/FCNotes/BBM/>